

ClearOne®

COLLABORATE® Pro 600

Quick-Start Guide




COLLABORATE PRO 600

COMPONENTS INCLUDED

COLLABORATE Pro 600	
	COLLABORATE Pro 600 codec with power supply and COLLABORATE Remote control with dongle
	910-2100-001 UNITE 100 PTZ camera, power supply, DVI-I to HDMI cable and RS232 Serial Control cable
	910-401-205-00 COLLABORATE Attach Microphone Array, cables and power supply.

MAKING THE CONNECTIONS

Connect the COLLABORATE Attach Microphone Array, the UNITE 100 camera, Ethernet, and monitor(s) to the COLLABORATE Pro 600 codec as shown.

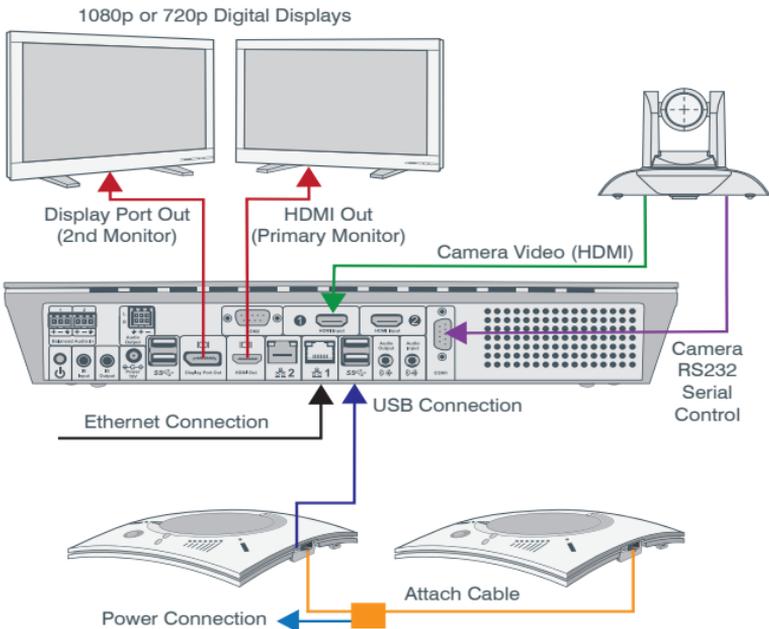

Note: Audio and power connections not shown.

COLLABORATE PRO 600

CONNECTING THE REMOTE CONTROL DONGLE


The Remote Control includes a dongle that plugs into the FRONT USB port on the codec.



AUDIO OUTPUT OPTIONS

There are three audio output options, accessed from the back of the COLLABORATE Pro, for connecting the audio.

1. Balanced Audio output to an amplifier that is connected to speakers
2. Line output to powered speakers
3. HDMI output to the primary monitor

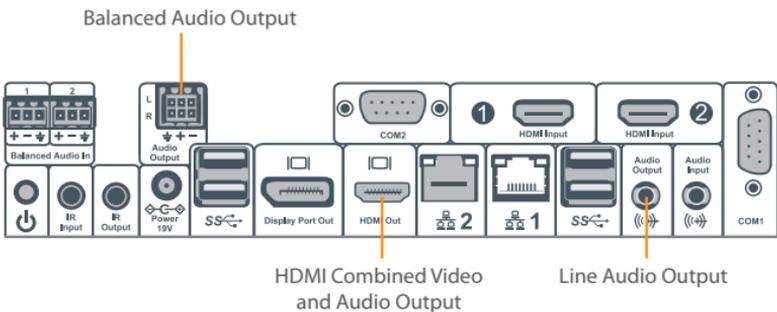

COLLABORATE PRO 600

CONFIGURING DISPLAY SETTINGS

After all peripherals are connected to the unit, turn the unit on.

Once COLLABORATE Pro is loaded – you will see your local camera video on your screen.

Using the remote control, navigate to the display settings:

Settings > System > Display

System


Audio	Display Mode	Single Mode
Camera	Display	Single/Main
Display	Device	HDMI
	Resolution	1280x720
	Display Remote On Main	<input checked="" type="checkbox"/>
	Keep Aspect Ratio	<input checked="" type="checkbox"/>
	Secondary Display Used For Data Only	<input type="checkbox"/>

According to your monitor capabilities, set to the maximum supported resolution. If 2 monitors are connected to the unit, the display mode is automatically changed to dual mode and you can set both monitors' resolutions.

CONFIGURING AUDIO SETTINGS

The COLLABORATE Pro 600 audio input is COLLABORATE Mic Array and audio output is set to the Balanced Audio Output.

Verify this in COLLABORATE **Settings > System > Audio**

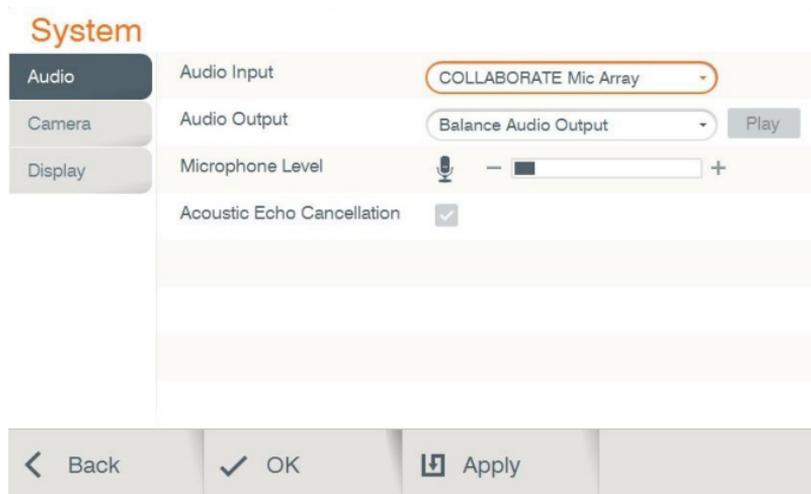

Note: It is recommended to use the COLLABORATE Attach Mic Array with both microphone arrays connected to each other.

COLLABORATE PRO 600

CONFIGURING NETWORK SETTINGS

Using your remote control, navigate into the network settings:

Settings > Advanced > IP

Advanced			
Admin	Obtain address from DHCP	<input checked="" type="checkbox"/>	Ethernet Speed 1000.0
IP	IP Address	<input type="text" value="172.20.1.10"/>	
Directory	Subnet Mask	<input type="text" value="255.255.0.0"/>	
H.323	Default Gateway	<input type="text" value="172.20.0.253"/>	
SIP	Obtain DNS automatically	<input checked="" type="checkbox"/>	
Multicast	DNS Server	<input type="text" value="172.20.0.100"/>	
Firewall	Additional DNS Server	<input type="text" value="172.20.0.105"/>	
Spontania	DNS Suffix	<input type="text" value="Clearone.com"/>	

The COLLABORATE Pro 600 obtains its IP automatically by default from the DHCP server.

Uncheck the DHCP checkbox in order to manually configure network settings.

CLEARONE CONTACTS

HEADQUARTERS:

Salt Lake City, UT USA

5225 Wiley Post Way
Suite 500
Salt Lake City, UT 84116

Sales: 800-707-6694

Toll Free: 800.945.7730

Fax: 801.303.5711

e-mail: sales@clearone.com

Europe & Oceania

Tel: +44.1454.616.977

e-mail: global@clearone.com

Latin America

Tel: +801.974.3621

e-mail: global@clearone.com

TechSales

Tel: 800.707.6694

e-mail: techsales@clearone.com

Technical Support

Tel: +800.283.5936

e-mail: collaborate.support@clearone.com

Asia Pacific

Tel: +852.3590.4526

e-mail: global@clearone.com

Middle East

Tel: +852.3590.4526

e-mail: global@clearone.com

© 2015 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice. QSG-0024-001 Revision 1.1, September, 2015